INT

Instructions for Use

Prevista Dry WC element 830 mm



equipped with Prevista Dry fixing set (model 8173)

Model
Z8530.32

viega

Table of contents

1 **About these instructions for use** 3

1.1 Target groups 3
1.2 Labelling of notes 3
1.3 About this translated version 4

2 **Product information** 5

2.1 Standards and regulations 5
2.2 Intended use 5
2.2.1 Areas of application 5

2.3 Product description 6
2.3.1 Overview 6
2.3.2 Technical data 6

3 **Handling** 8

3.1 Assembly information 8
3.1.1 Mounting conditions 8
3.1.2 Installation dimensions 8

3.2 Assembly 9
3.2.1 Mounting the cistern 9
3.2.2 Connecting concealed cistern 10
3.2.3 Mounting the drain elbow 17
3.2.4 Setting up and cladding the concealed cistern 18
3.2.5 Setting the flush volume 19

3.3 Cleaning 21
3.4 Maintenance 21
3.5 Disposal 21

1 About these instructions for use

Trade mark rights exist for this document; for further information, go to *viega.com/legal*.

1.1 Target groups

The instructions for installation, commissioning and maintenance are intended for:

- Heating and plumbing experts and trained personnel
- Drywall builders

NOTICE!
In addition to the Viega instructions, follow the generally recognised rules of technology.

Individuals without the abovementioned training or qualification are not permitted to mount, commission and, if required, maintain this product.

1.2 Labelling of notes

Warning and advisory texts are set aside from the remainder of the text and are labelled with the relevant pictographs.

DANGER!
This symbol warns of possible life-threatening injury.

WARNING!
This symbol warns of possible serious injury.

CAUTION!
This symbol warns of possible injury.

NOTICE!
This symbol warns of possible damage to property.

This symbol gives additional information and hints.

1.3 About this translated version

This instruction for use contains important information about the choice of product or system, assembly and commissioning as well as intended use and, if required, maintenance measures. The information about the products, their properties and application technology are based on the current standards in Europe (e.g. EN) and/or in Germany (e.g. DIN/DVGW).

Some passages in the text may refer to technical codes in Europe/Germany. These should serve as recommendations in the absence of corresponding national regulations. The relevant national laws, standards, regulations, directives and other technical provisions take priority over the German/European directives specified in this manual: The information herein is not binding for other countries and regions; as said above, they should be understood as a recommendation.

2 Product information

2.1 Standards and regulations

The following standards and regulations apply to Germany / Europe and are provided as a support feature.

Regulations from section: Fields of application / Mounting conditions

Scope / Notice	Regulations applicable in Germany
Suitable masonry walls	EN 1996-1-1
Suitable concrete walls	DIN 1045

2.2 Intended use

2.2.1 Areas of application

This model is suitable for mounting in wet construction.

2.3 Product description

2.3.1 Overview

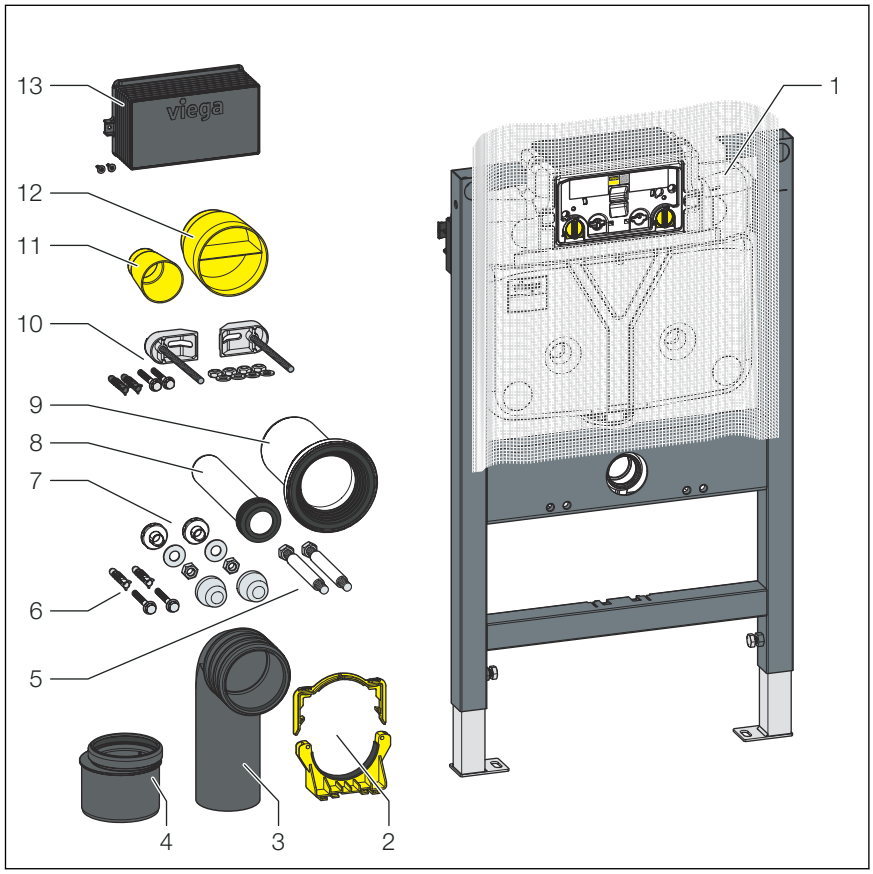


Fig. 1: Components

1 Concealed cistern 3S
2 Mounting bracket set
3 Waste elbow
4 Reducer
5 Threaded rods for fixing sanitary objects (gauges for bore hole 180 or 230 mm)
6 Screws and dowels for fixing in the floor
7 Mounting set for WC ceramic
8 Flushing pipe
9 WC connection socket with lip seal
10 fixing set
11 Site protection
12 Site protection
13 Inspection shaft cover

2.3.2 Technical data

Flush volume

Small flush volume	Factory setting	Approx. 3.5 l
	Setting range	Approx. 2.5–3.5 l

Large flush volume	Factory setting	Approx. 4.5 l
	Setting range	Approx. 3.5–6 l

Water pressure

Water pressure min.	15 kPa (0.15 bar)
Water pressure max.	1000 kPa (10 bar)

3 Handling

3.1 Assembly information

3.1.1 Mounting conditions

Suitable walls

- Masonry walls
- Concrete walls

The wall constructions must comply with the regulations in section *'Regulations from section: Fields of application / Mounting conditions' on page 5*.

The WC element may only be mounted on even wall surfaces.

Construction height

With the construction height, the marked height of the upper edge of the finished floor must be observed.

3.1.2 Installation dimensions


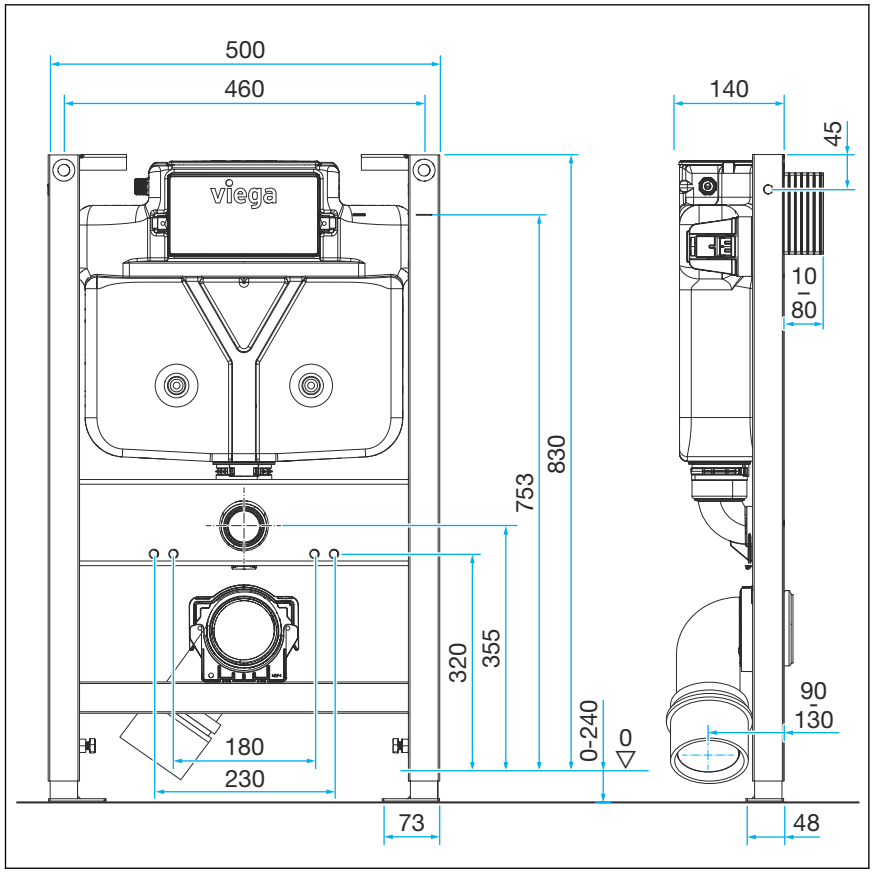


Fig. 2: Dimensional drawing


3.2 Assembly

3.2.1 Mounting the cistern

Mounting to a masonry or concrete wall

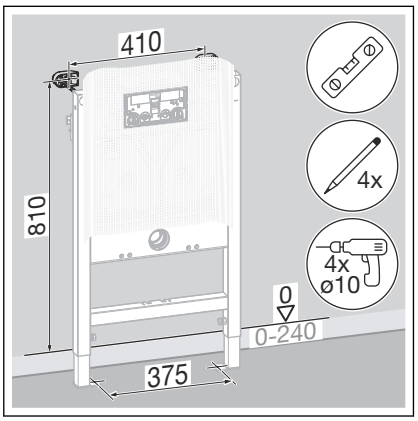


- Determine and mark the fixing points.

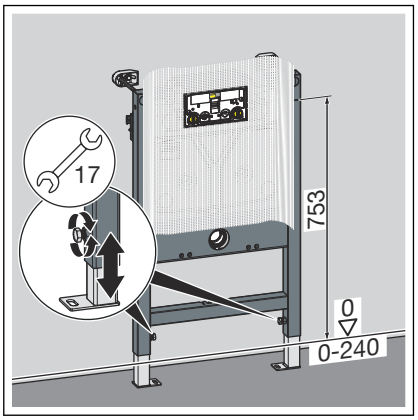


- Adjust the construction height of the element in accordance with the on-site marking of the upper edge of the finished floor.

  X: 753 mm

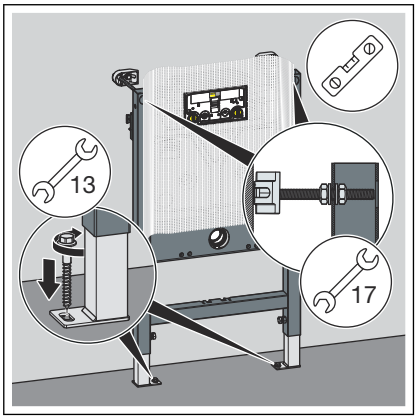


- Attach the WC element to the wall using the fixing set.
- Tighten the feet of the element using a fork spanner.


3.2.2 Connecting concealed cistern

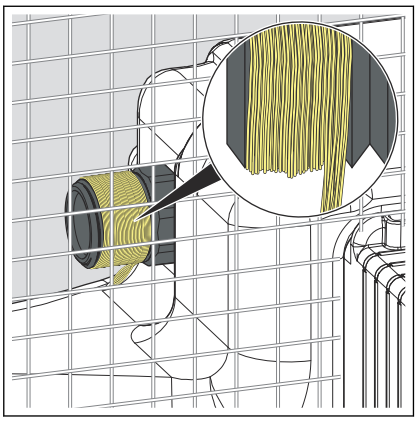

- Seal the threaded connectors of the corner valve.

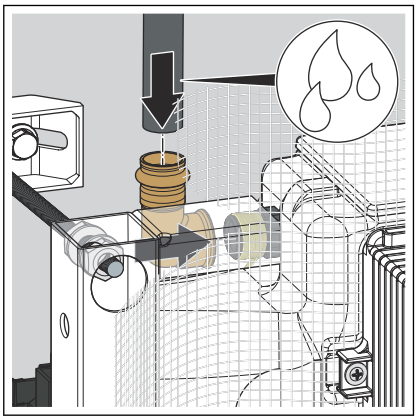


- Place the press connector onto the water supply.
- Press the connection.
- Screw the corner valve into the thread side of the press connector.

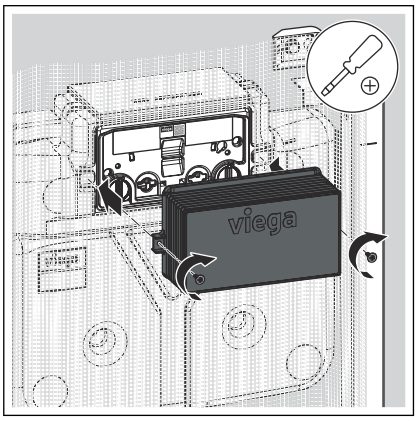


- Screw the inspection shaft to the cistern.

Conversion of the actuation from above

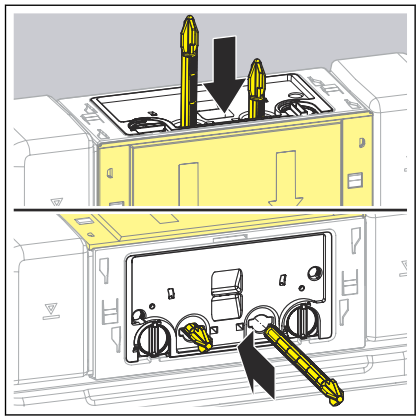


Oben: For actuation from above, insert the actuating rods from above.
Unten: For actuation from the front, insert the actuating rods from the front.


NOTICE!
The drain valve actuation mechanism must not be adapted for actuation from above.

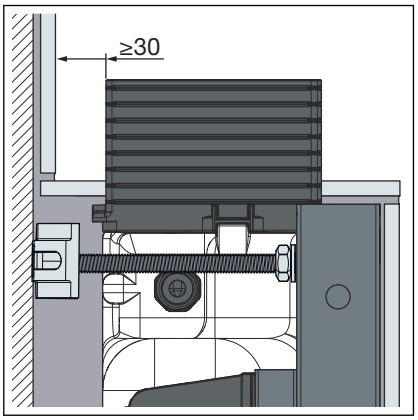

- The distance between the inspection shaft and the wall tiles must be at least 30 mm.

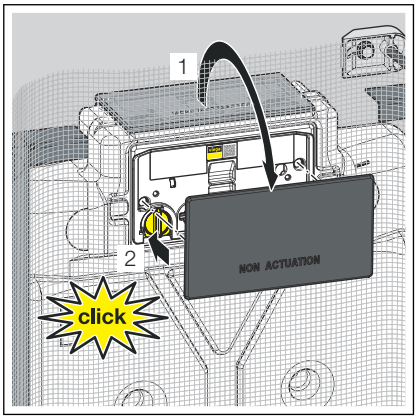


- Remove the cover and insert at the front.

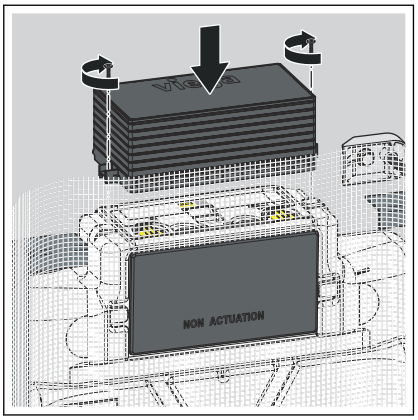


- Screw the inspection shaft to the cistern.


Relocation of the water connection from the left to the right

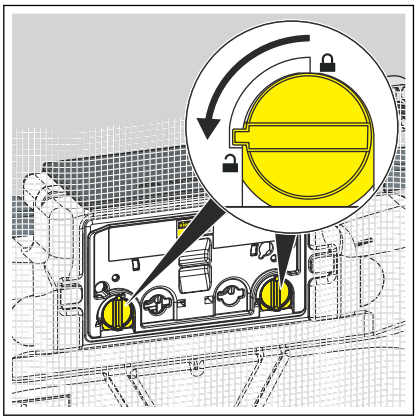


- Turn the site protection panel lock 90° anti-clockwise.

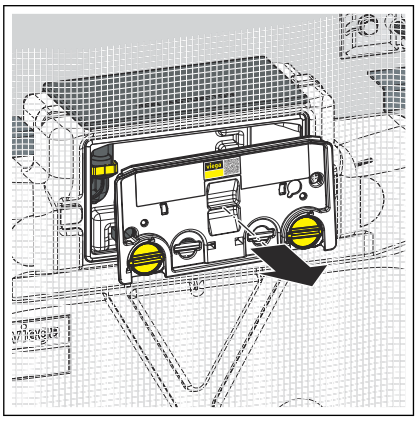


- Remove the site protection panel.

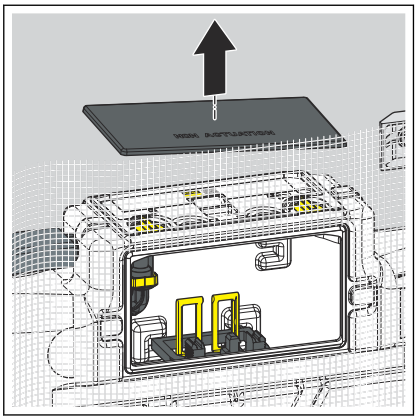


Remove the cover.

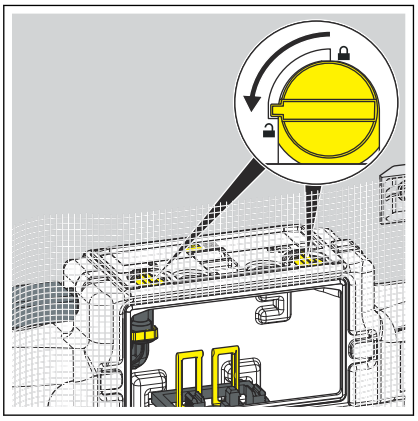


Turn the site protection panel lock 90° anti-clockwise.

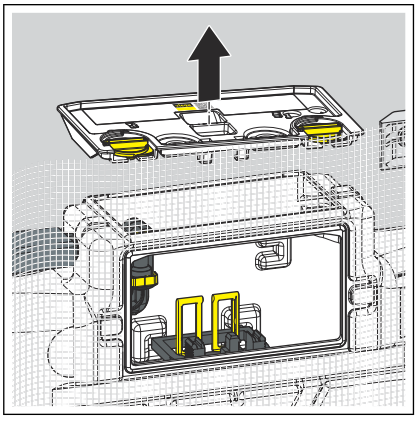


Remove the site protection panel.

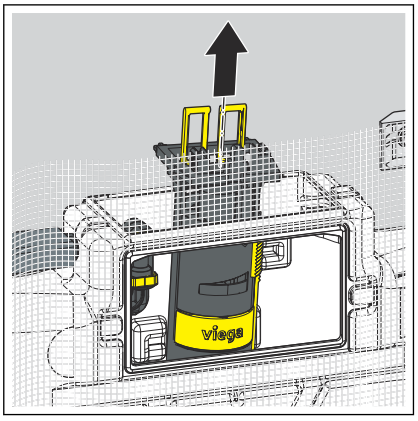


Remove the drain valve through the revision opening.

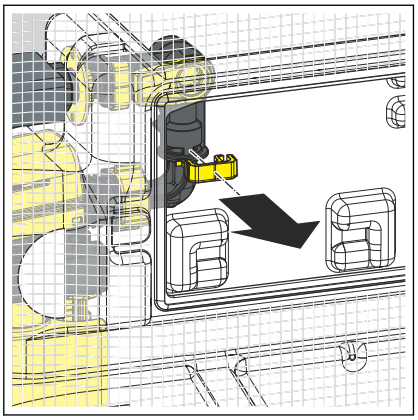


Loosen the lock on the filling valve.

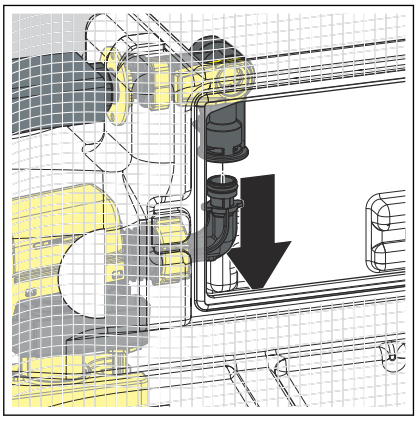


Loosen the filling valve in the cistern.

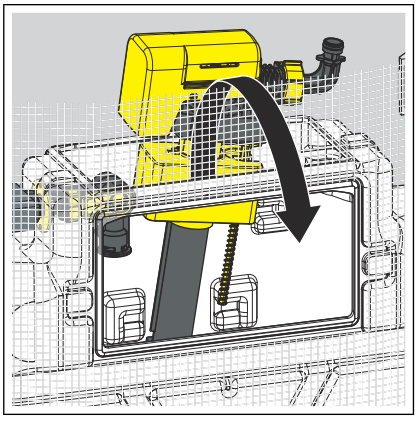


Remove the filling valve.

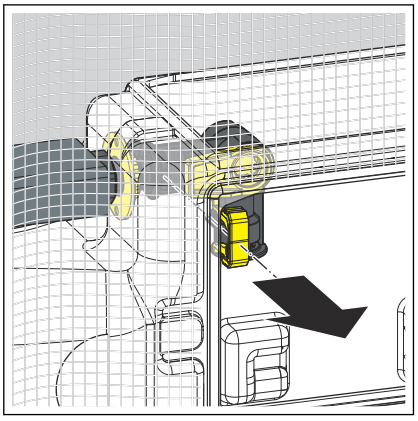


Loosen the corner valve.

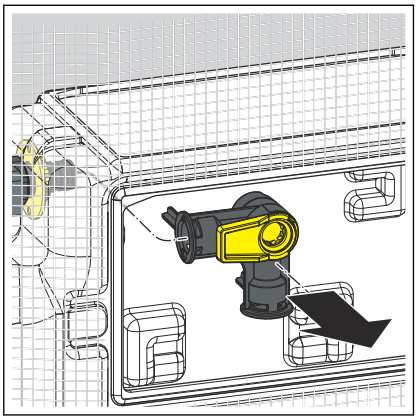


- Remove the corner valve.

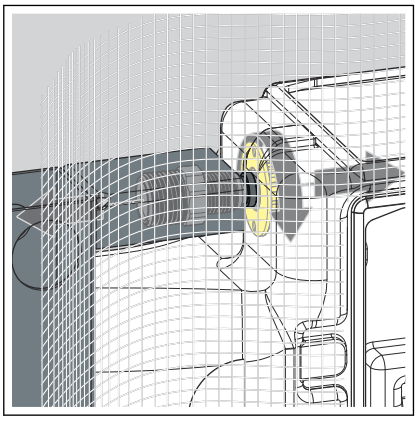


- Loosen the angle valve mounting.

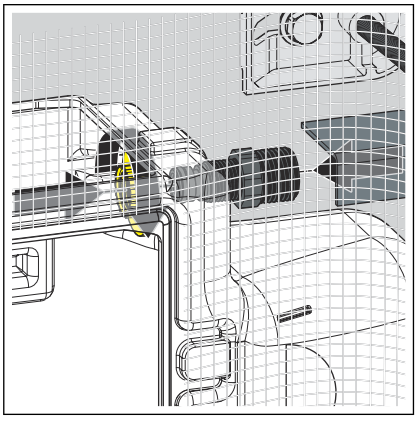


- Fit the angle valve mounting bracket on the other side of the cistern.

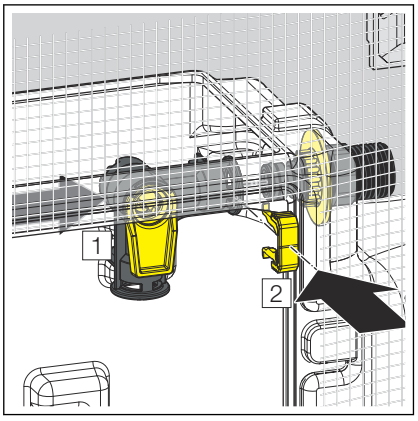


- Fit the corner valve.

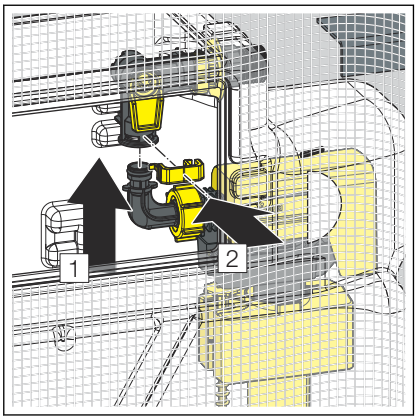


- Insert the filling valve.

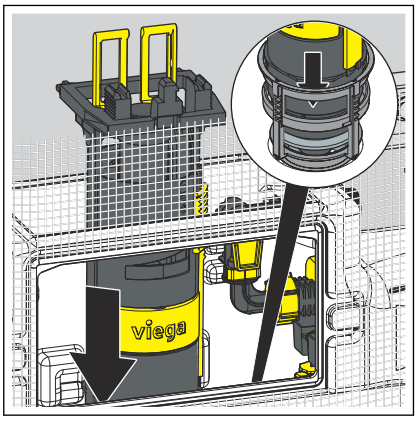


- Insert the drain valve through the inspection opening into the cistern.

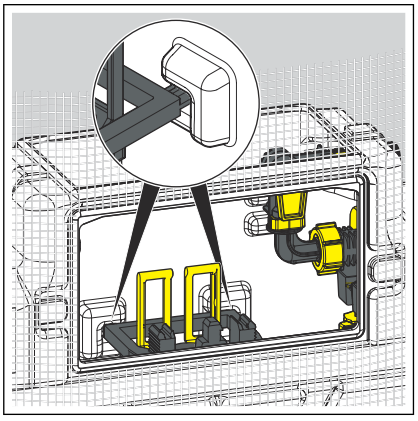


- Ensure that the drain valve is fitted correctly.

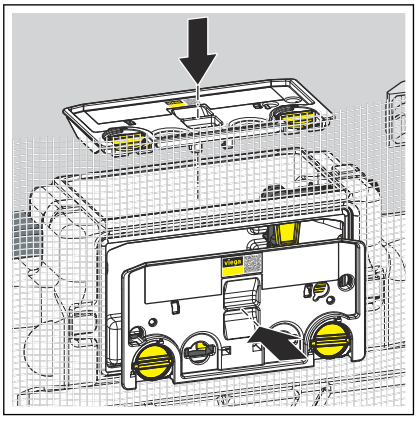

- Insert the site protection panel into the cistern.

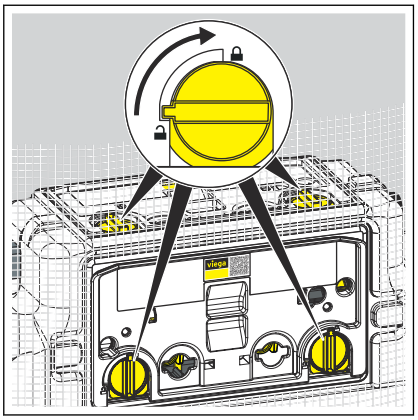


- Turn the site protection panel's lock by 90° clockwise.

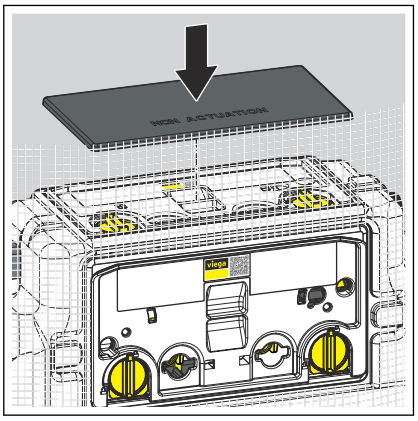


- Insert the cover.


3.2.3 Mounting the drain elbow

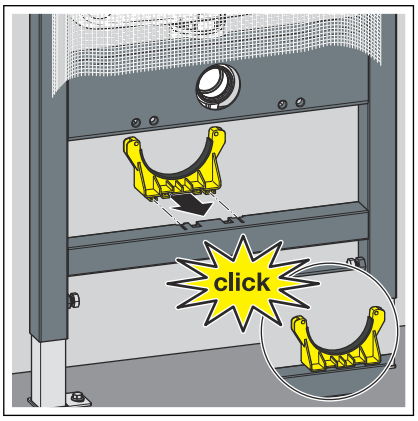

- Insert the mounting bracket.

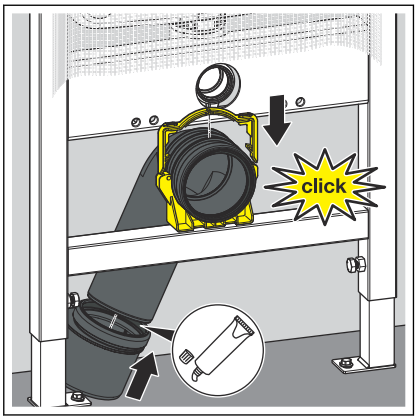


- Insert the drain elbow.
- Fasten the drain elbow using the bow.
- Grease the reducer.

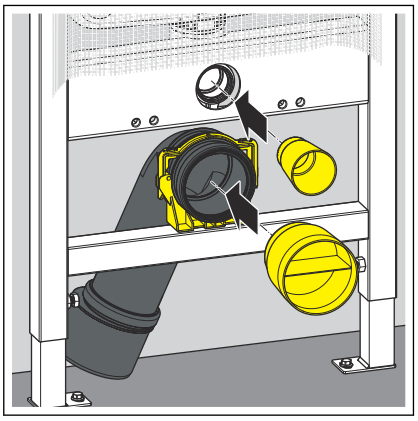


- Fit the site protection.


3.2.4 Setting up and cladding the concealed cistern

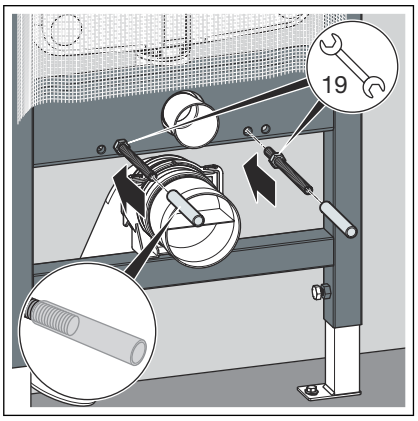

- Turn in the threaded rods by hand.
- Place the protective caps on the threaded rods.

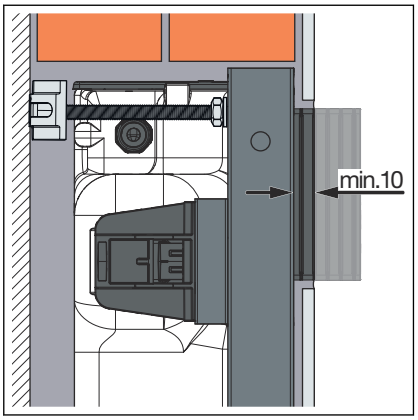

- The tiling format must be at least 10 mm.

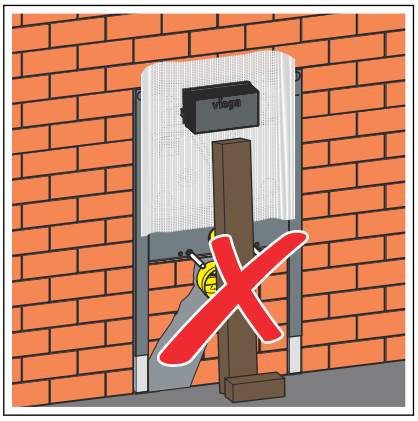


NOTICE! Do not load the cistern.


3.2.5 Setting the flush volume

Requirements:


- The cistern is freely accessible.
- The water supply has been shut off.
- The ceramic has been mounted.

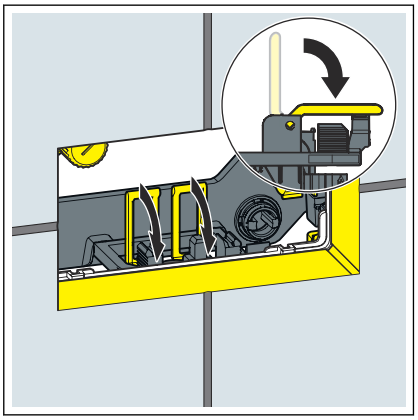


- Fold the tabs forward.

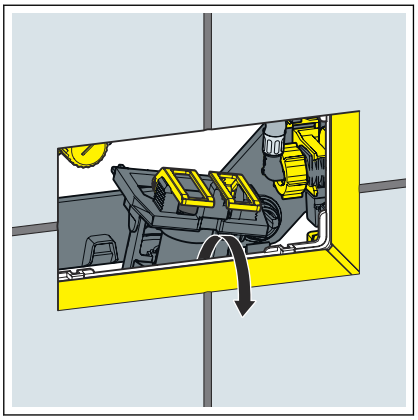


Lift the drain valve.

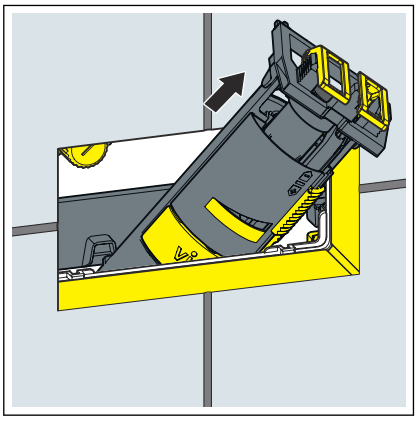

Remove the drain valve through the revision opening.

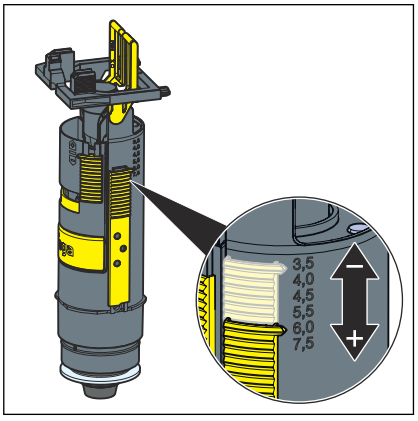

Set the large flush volume at the drain valve.

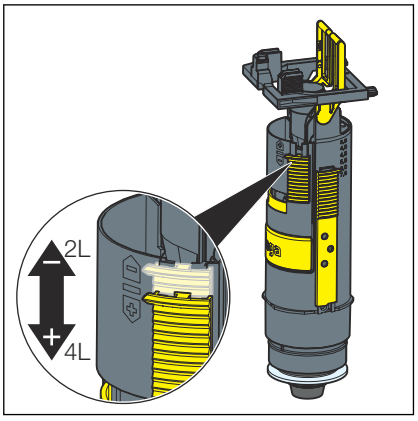

Set the small flush volume at the drain valve.

3.3 Cleaning

The concealed cistern is constantly under mechanical, chemical, and physical stress. For this reason, the components must be cleaned as required.

3.4 Maintenance

The concealed cistern is constantly under mechanical, chemical, and physical stress. For this reason, the drain and filling valve gaskets must be renewed.

In areas or regions with hard water due to high concentration of calcium or magnesium salts, there is the risk of limescale deposits developing on the inlet and drain valves. The valves may have to be replaced, depending on the extent of the deposits.

3.5 Disposal

Separate the product and packaging materials (e. g. paper, metal, plastic or non-ferrous metals) and dispose of in accordance with valid national legal requirements.

Viega GmbH & Co. KG
service-technik@viega.de
viega.com

INT • 2026-08 • VPN250321