


Advantix Cleviva height adjustment piece

Instructions for Use

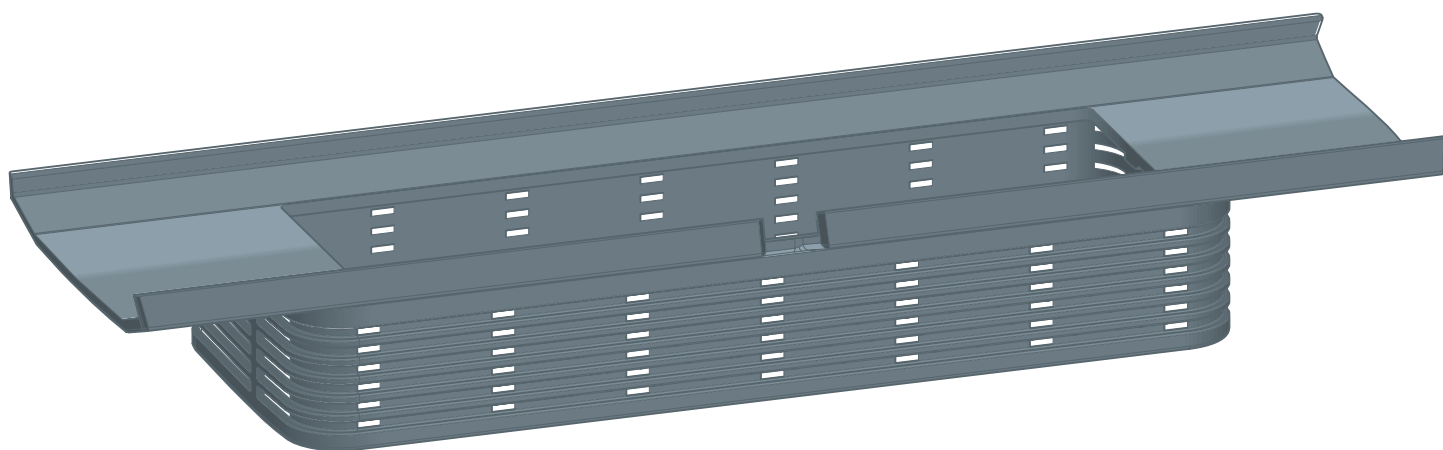

for Advantix Cleviva shower channel

Model
4981.84

en_INT

viega

Table of contents

1	About these instructions for use	4
1.1	Target groups	4
1.2	Labelling of notes	4
1.3	About this translated version	5
 2	 Product information	 6
2.1	Intended use	6
2.1.1	Areas of use	6
2.1.2	Media	6
2.2	Required accessories	6
 3	 Handling	 7
3.1	Assembly information	7
3.1.1	Installation dimensions	7
3.2	Assembly	8
3.2.1	Mounting height adjustment piece and shower channel profile	8
3.3	Care	12
3.3.1	Care tips	12
3.4	Disposal	12

1 About these instructions for use

Trade mark rights exist for this document; for further information, go to viega.com/legal.

1.1 Target groups

The information in this instruction manual is directed at the following groups of people:

- Heating and plumbing professionals and trained personnel

Individuals without the abovementioned training or qualification are not permitted to mount, install and, if required, maintain this product. This restriction does not extend to possible operating instructions.

The installation of Viega products must take place in accordance with the general rules of engineering and the Viega instructions for use.

1.2 Labelling of notes

Warning and advisory texts are set aside from the remainder of the text and are labelled with the relevant pictographs.



DANGER!

This symbol warns of possible life-threatening injury.



WARNING!

This symbol warns of possible serious injury.



CAUTION!

This symbol warns of possible injury.



NOTICE!

This symbol warns of possible damage to property.



This symbol gives additional information and hints.

1.3 About this translated version

This instruction for use contains important information about the choice of product or system, assembly and commissioning as well as intended use and, if required, maintenance measures. The information about the products, their properties and application technology are based on the current standards in Europe (e.g. EN) and/or in Germany (e.g. DIN/DVGW).

Some passages in the text may refer to technical codes in Europe/Germany. These should serve as recommendations in the absence of corresponding national regulations. The relevant national laws, standards, regulations, directives and other technical provisions take priority over the German/European directives specified in this manual: The information herein is not binding for other countries and regions; as said above, they should be understood as a recommendation.

2 Product information

2.1 Intended use

2.1.1 Areas of use

The Advantix Cleviva height adjustment piece is intended for mounting a Advantix Cleviva shower channel profile on a Advantix Cleviva shower channel base unit.

2.1.2 Media

- The short-term temperature of the wastewater may reach up to 95° C. The temperature must be considerably lower in constant operation.
- The pH value must be higher than 4 but lower than 10.

It is not permitted to introduce wastewater which would damage the product material.

2.2 Required accessories

For the complete mounting an Advantix Cleviva shower channel profile (model 4981.30, 4981.31 or 4981.32) and a shower channel insert (model 4981.50 or 4981.60) are required.

3 Handling

3.1 Assembly information

3.1.1 Installation dimensions


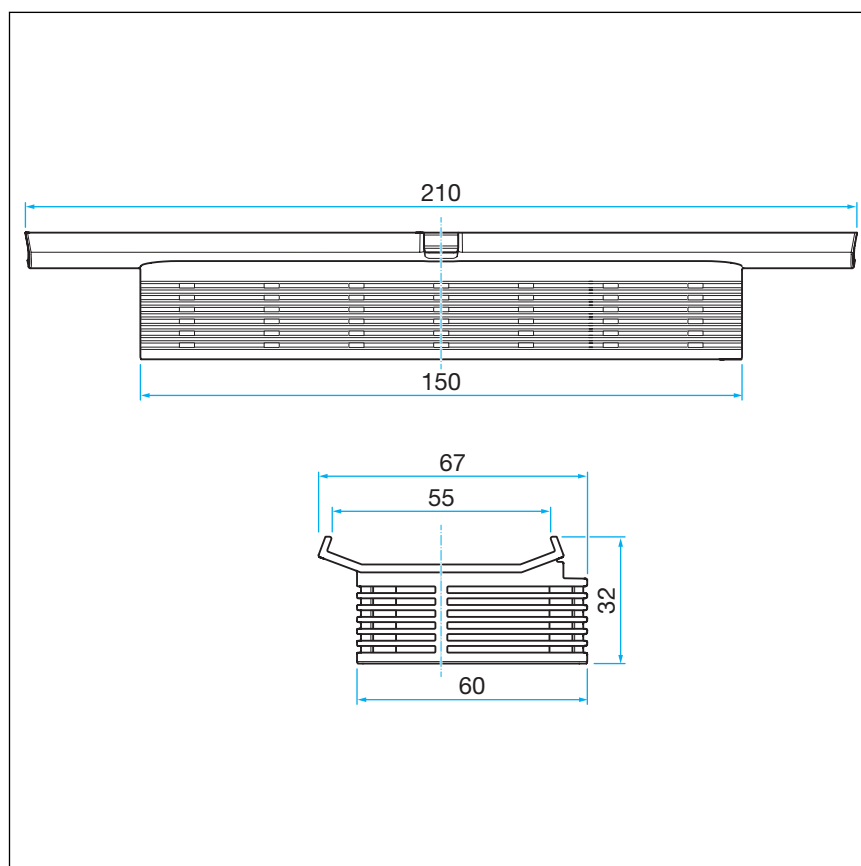


Fig. 1: Dimensions

3.2 Assembly


3.2.1 Mounting height adjustment piece and shower channel profile

Mounting the shower channel profile

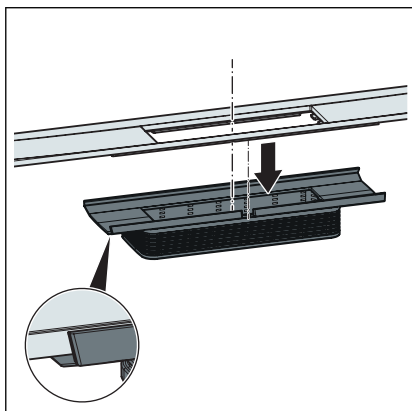


- Insert the shower channel profile into the height adjustment piece as far as it will go.

Make sure that shower channel profile protrusion sits exactly in the recess of the height adjustment piece.

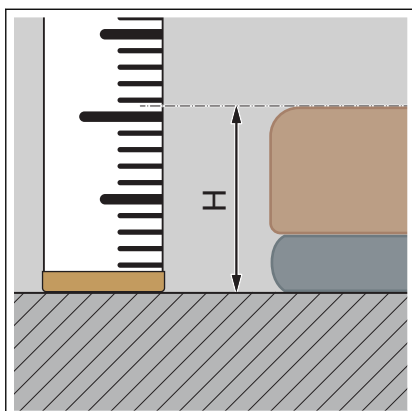


- Determine the flooring height H.


INFO! For fault-free drainage, Viega recommends laying the floor covering 1–2 mm higher than the shower channel profile.

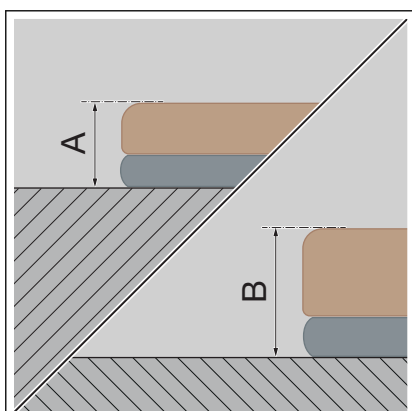


- Due to the stepless shortening of the top, an installation height of at least A 12 mm to B 30 mm is possible for tiles and tile adhesive.

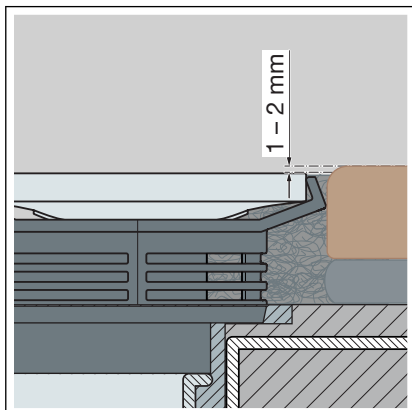


- Lay the floor covering 1–2 mm higher than the shower channel profile.

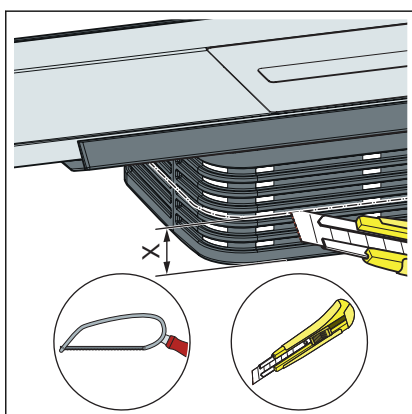


- Dimension $X = 30 \text{ mm} - H$
Shorten dimension X along the cutting aid and deburr.

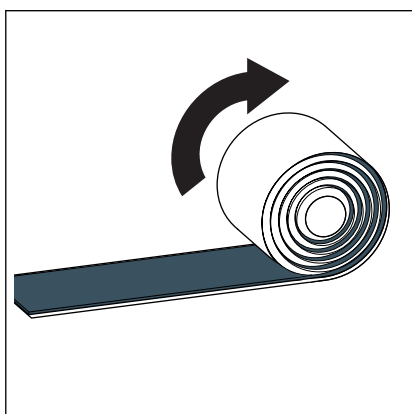


- Unroll the butyl tape and cut to size.

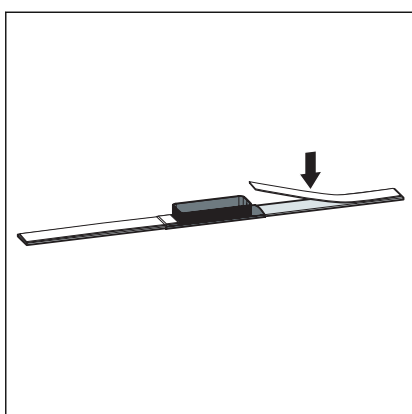


- Stick the butyl tape centrally on the underside of the shower channel profile.

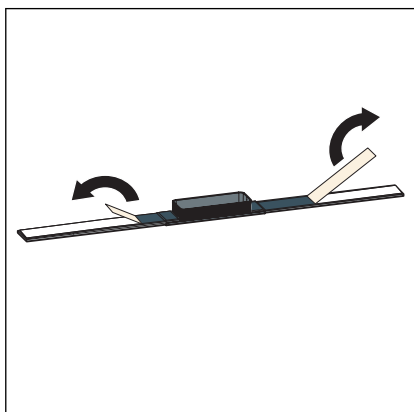


- Remove the protective foil.

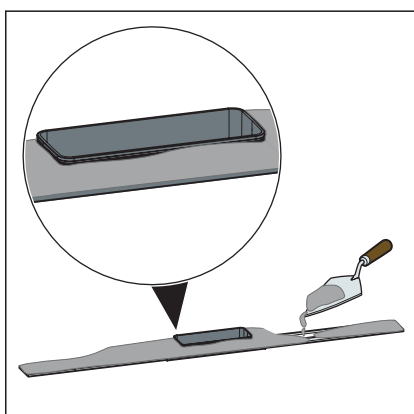


- Apply the tile adhesive over the entire surface of the shower channel profile and the height adjustment piece.

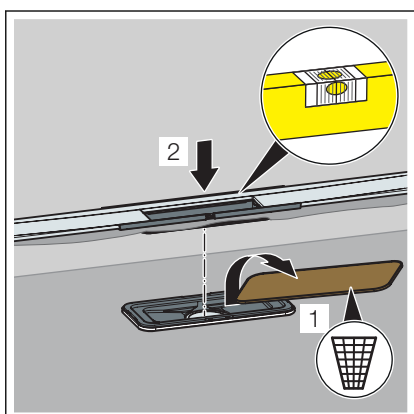

- Remove the site protection.
Do not damage the bonded sealing.
- Insert the shower channel profile and the height adjustment piece.

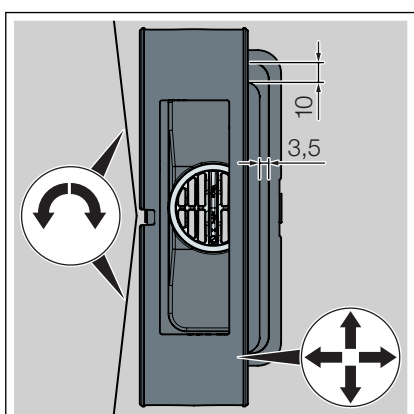


- Align the shower channel profile and the height adjustment piece horizontally.
 - The shower channel profile can be radially rotated by max. 10 mm (with a 1200 mm shower channel profile).
 - The height adjustment piece can be moved on the long side by 3.5 mm and on the head side by 10 mm.

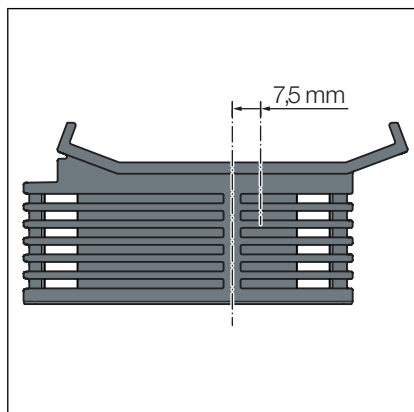


- To allow the shower channel profile to be adapted to the tile pattern, the profile mount is eccentrically positioned by 7.5 mm.

After alignment, fasten the height adjustment piece with tile adhesive.

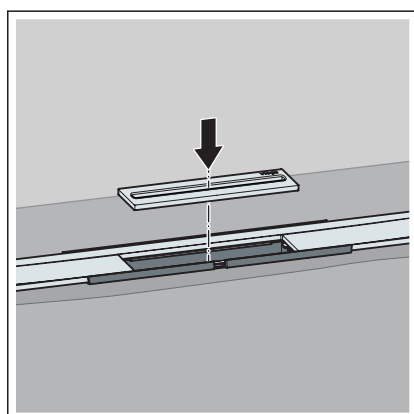


- Fit the insert.

Two insert variants are available:

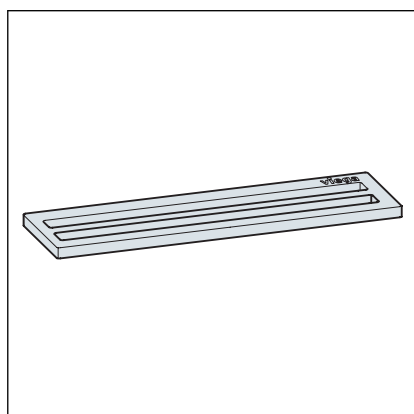


- Inlet opening double, model 4981.50

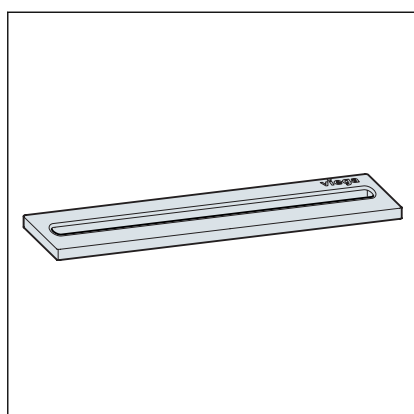

- Inlet opening single, model 4981.60

Laying the floor tiles

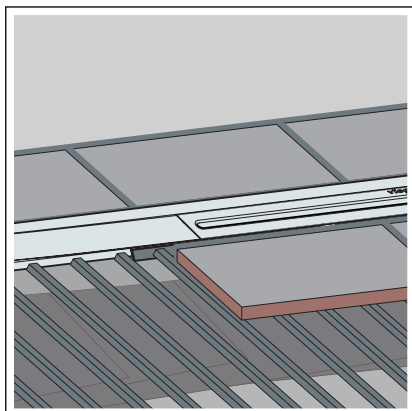

- Apply the tile adhesive.
- Lay the floor tiles up to the shower channel profile.
- Seal any gaps between tile and grate element with a suitable filler material or joint filler.

3.3 Care

3.3.1 Care tips

Normal soap or a mild cleaning agent can be used for regular maintenance and prevention of lime scale on the grate and frame. Use no scouring agent or abrasive objects.

Strong stains, even around the drain unit and the siphon, can be removed using typical household cleaner. Rinse the detergent very thoroughly with clear water after the prescribed dwell time. There should be no residue on the components.

3.4 Disposal

Separate the product and packaging materials (e. g. paper, metal, plastic or non-ferrous metals) and dispose of in accordance with valid national legal requirements.