

Advantix shower channel mounting frame

Instructions for Use



For mounting with an Advantix shower channel

Model
4982.45

en_INT



Table of contents

1	About these instructions for use	4
1.1	Target groups	4
1.2	Labelling of notes	4
1.3	About this translated version	5
2	Product information	6
2.1	Standards and regulations	6
2.2	Product description	6
2.2.1	Overview of the components	6
3	Handling	7
3.1	Assembly information	7
3.1.1	Important note	7
3.1.2	Installation dimensions	7
3.2	Assembly	8
3.3	Disposal	9

1 About these instructions for use

Trade mark rights exist for this document; for further information, go to viega.com/legal.

1.1 Target groups

The information in this instruction manual is directed at the following groups of people:

- Heating and sanitary professionals and trained personnel
- Tilers

Individuals without the abovementioned training or qualification are not permitted to mount, install and, if required, maintain this product. This restriction does not extend to possible operating instructions.

The installation of Viega products must take place in accordance with the general rules of engineering and the Viega instructions for use.

1.2 Labelling of notes

Warning and advisory texts are set aside from the remainder of the text and are labelled with the relevant pictographs.



DANGER!

This symbol warns of possible life-threatening injury.



WARNING!

This symbol warns of possible serious injury.



CAUTION!

This symbol warns of possible injury.



NOTICE!

This symbol warns of possible damage to property.



This symbol gives additional information and hints.

1.3 About this translated version

This instruction for use contains important information about the choice of product or system, assembly and commissioning as well as intended use and, if required, maintenance measures. The information about the products, their properties and application technology are based on the current standards in Europe (e. g. EN) and/or in Germany (e. g. DIN/DVGW).

Some passages in the text may refer to technical codes in Europe/Germany. These should serve as recommendations in the absence of corresponding national regulations. The relevant national laws, standards, regulations, directives and other technical provisions take priority over the German/European directives specified in this manual: The information herein is not binding for other countries and regions; as said above, they should be understood as a recommendation.

2 Product information

2.1 Standards and regulations

The following standards and regulations apply to Germany / Europe. National regulations can be found on the relevant web site of your country at viega.com/standards.

Regulations from section: Media

Scope / Notice	Regulations applicable in Germany
Typical domestic wastewater	DIN 1986-3

2.2 Product description

Advantix mounting frames are suitable for use in Advantix shower channels base unit model 4982.10 and 4982.20.

Advantix mounting frames are suitable for all Advantix shower channel grates with a layer height of 12-15 mm (tile and adhesive).

Only wastewater commonly encountered in households may be introduced, see ↗ „Regulations from section: Media“ on page 6.

Observe the instructions for use of the base unit when mounting.

2.2.1 Overview of the components

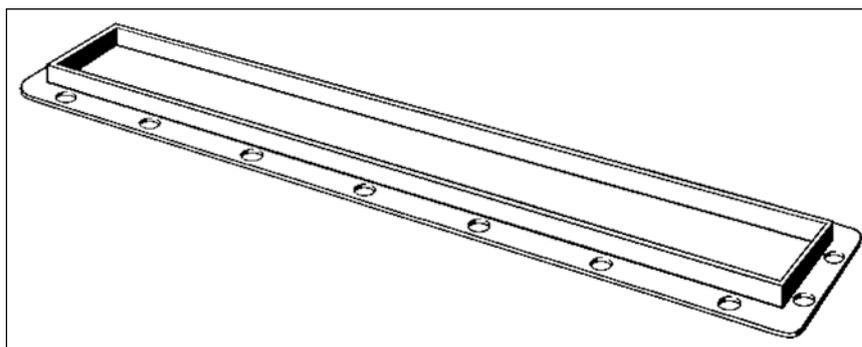


Fig. 1: Components and scope of delivery

Advantix mounting frame for stainless steel 1.4301 Advantix shower channel

3 Handling

3.1 Assembly information

3.1.1 Important note

During assembly:

- Observe installation dimensions.

After assembly:

- The shower channel must be fully lined with mortar.
- Coordinate all relevant installation details, especially regarding the bonded sealing, with those responsible for the subsequent work.

3.1.2 Installation dimensions

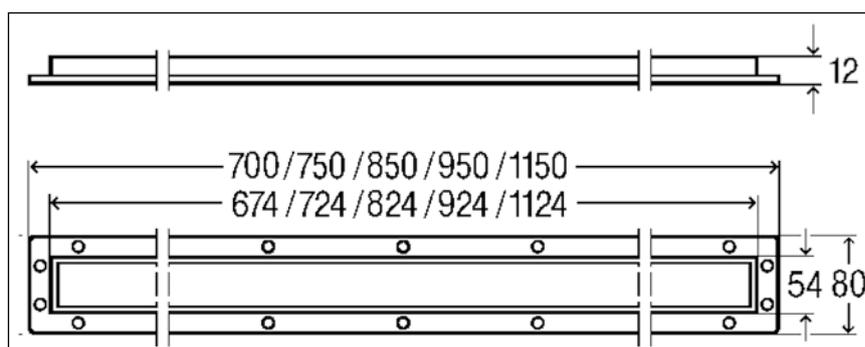




Fig. 2: Dimensions

Model	Art. no.	Length
4982.45	745 356	750
	745 363	800
	745 370	900
	745 387	1000
	745 394	1200


3.2 Assembly

Requirements:


- The shower channel has been mounted according to the instructions for use.
- The complete surface of the shower channel has been lined.
- The shower channel has been sealed, and the thin bed sealing is fully cured.
- The shower channel is equipped with a protective insert.
- Apply the tile adhesive.

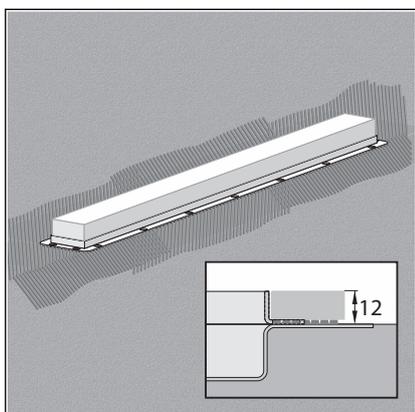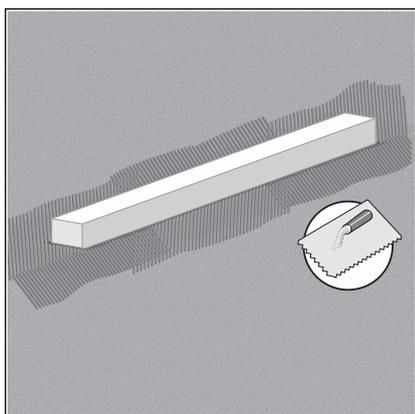


- Mounting height 12 mm: Press the tile end rail down into the tile adhesive as far as it will go.

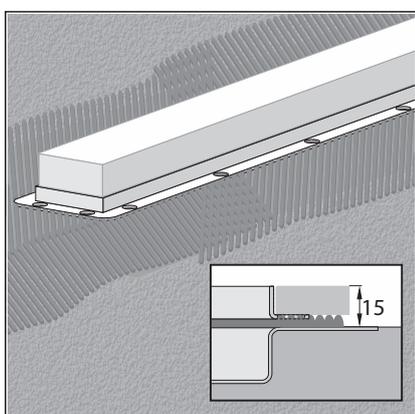


- Mounting height 15 mm: Set the tile end rail onto a tile adhesive bed of a thickness of max. 3 mm.

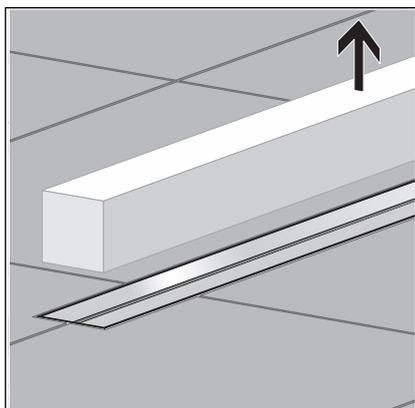

- Remove the protective insert.

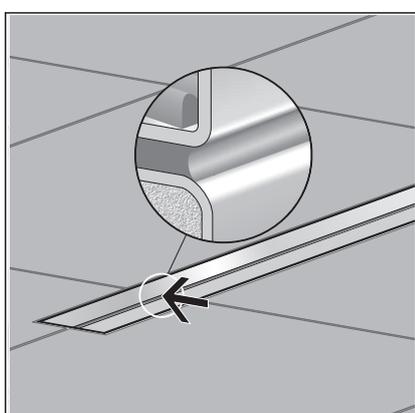

- If a gap has formed at the inside of the shower channel, seal it with tile adhesive or joint filler.

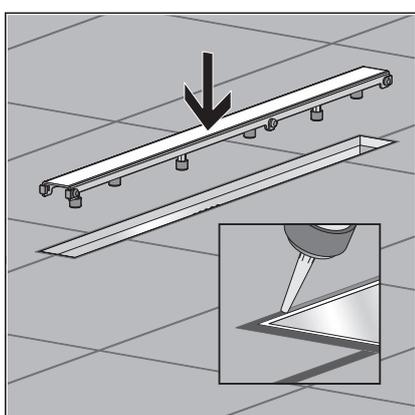

- Regarding mounting of the grate, refer to the instructions for use for the grate.

3.3 Disposal

Separate the product and packaging materials (e. g. paper, metal, plastic or non-ferrous metals) and dispose of in accordance with valid national legal requirements.