


Instructions for Use

Easytop Concealed Equipment set

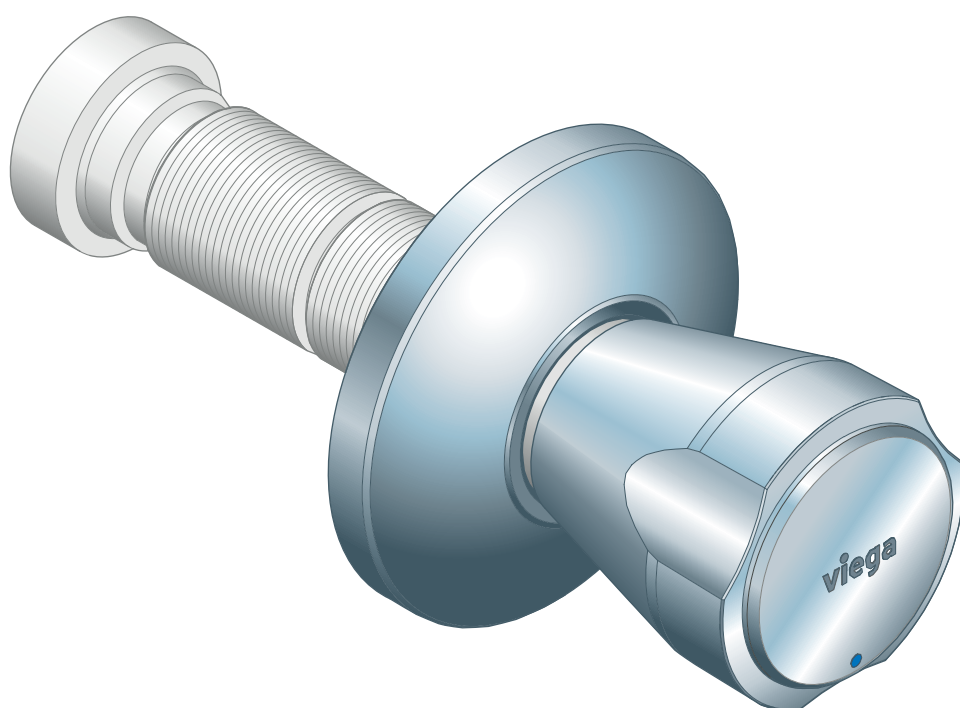

for Easytop concealed valves

Model
2236.20

viega

Table of contents

1	About these instructions for use	3
1.1	Target groups	3
1.2	Labelling of notes	3
1.3	About this translated version	4
2	Product information	5
2.1	Intended use	5
2.1.1	Areas of application	5
2.2	Product description	6
2.2.1	Overview	6
3	Handling	7
3.1	Assembly information	7
3.1.1	Mounting instructions	7
3.1.2	Required tools	7
3.2	Assembly	7
3.2.1	Concealed mounting equipment set	7
3.3	Maintenance	9
3.4	Disposal	9

1 About these instructions for use

Trade mark rights exist for this document; for further information, go to viega.com/legal.

1.1 Target groups

The information in this manual is directed at heating and sanitary professionals and trained personnel.

Individuals without the abovementioned training or qualification are not permitted to mount, install and, if required, maintain this product. This restriction does not extend to possible operating instructions.

The installation of Viega products must take place in accordance with the general rules of engineering and the Viega instructions for use.

1.2 Labelling of notes

Warning and advisory texts are set aside from the remainder of the text and are labelled with the relevant pictographs.



DANGER!

This symbol warns of possible life-threatening injury.



WARNING!

This symbol warns of possible serious injury.



CAUTION!

This symbol warns of possible injury.



NOTICE!

This symbol warns of possible damage to property.



This symbol gives additional information and hints.

1.3 About this translated version

This instruction for use contains important information about the choice of product or system, assembly and commissioning as well as intended use and, if required, maintenance measures. The information about the products, their properties and application technology are based on the current standards in Europe (e.g. EN) and/or in Germany (e.g. DIN/DVGW).

Some passages in the text may refer to technical codes in Europe/Germany. These should serve as recommendations in the absence of corresponding national regulations. The relevant national laws, standards, regulations, directives and other technical provisions take priority over the German/European directives specified in this manual: The information herein is not binding for other countries and regions; as said above, they should be understood as a recommendation.

2 Product information

2.1 Intended use

2.1.1 Areas of application

The model is suitable for use in the following Easytop concealed valves:

	Model number
Easytop concealed free-flow valve	2278.5
	2278.6
	5340
Easytop concealed straight seat valve	2235.2
	2235.3
	5335.2
Easytop concealed domestic water meter unit	2231.03
	2231.04
	2231.13
	2231.14
	2231.3
	2231.4

2.2 Product description

2.2.1 Overview

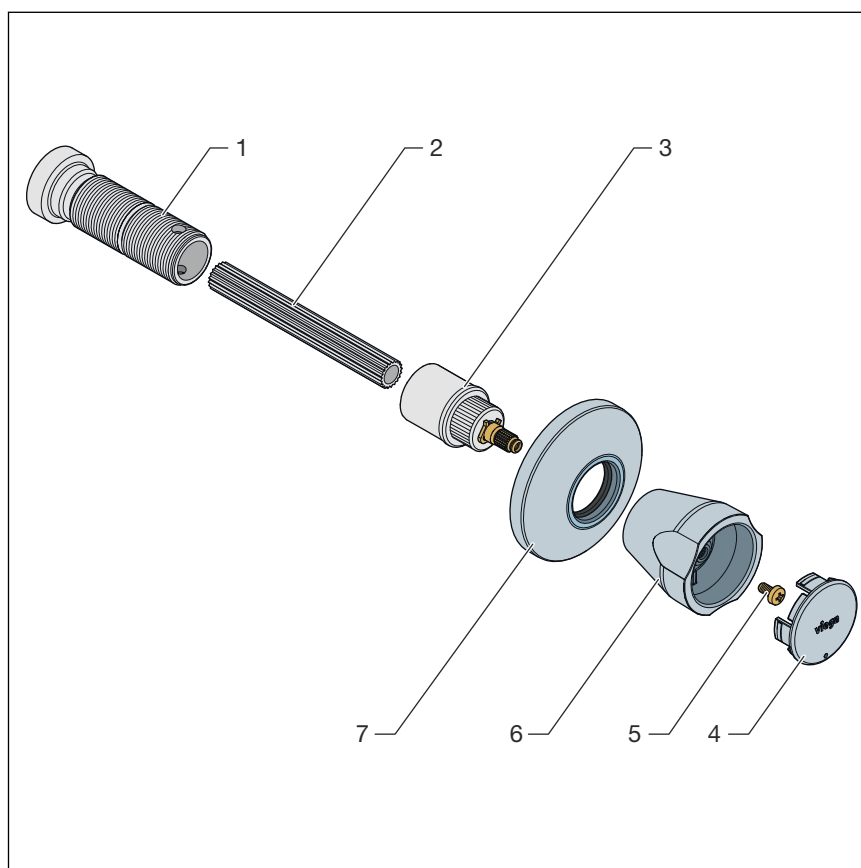


Fig. 1: Concealed Equipment set

- 1 - Concealed extension
- 2 - Spindle extension
- 3 - Pre-assembled cap
- 4 - Decorative cap
- 5 - Fixing screw
- 6 - Brass handle
- 7 - Push rosette

3 Handling

3.1 Assembly information

3.1.1 Mounting instructions



Choose the place of installation so that the fitting is easily accessible, simple to operate and can be mounted without any problems.

3.1.2 Required tools

The following tools are required for mounting:

- fine-toothed saw
- Phillips-tip screwdriver

3.2 Assembly

3.2.1 Concealed mounting equipment set




After assembly, carry out a function test.

Installation is possible in masonry (wet construction) and in dry constructions (pre-wall / duct installations).




NOTICE!


Do not screw and tighten the internal upper section onto the spindle.

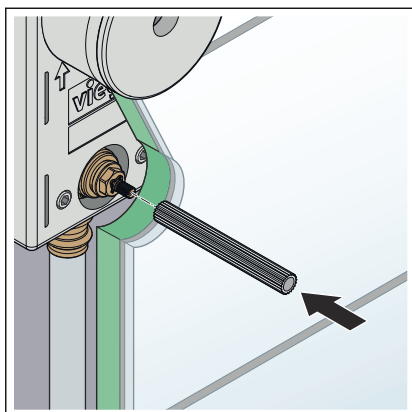


- Remove the protective cap from the valve bonnet.
- Fit the spindle extension with the inner fluting onto the valve bonnet.

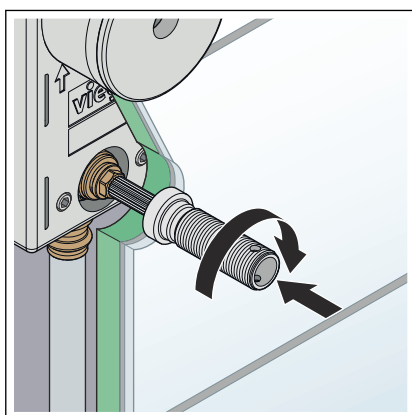


- Screw on the flush-mounted extension.

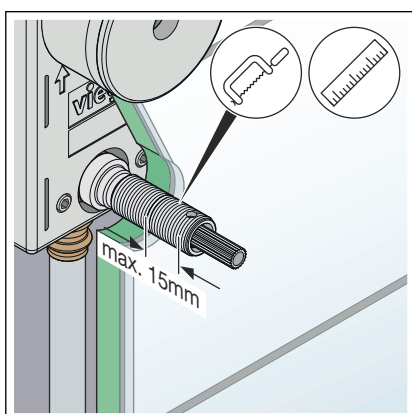


- The spindle and concealed extension should only protrude 15 mm from the wall; otherwise, cut the extension to length.

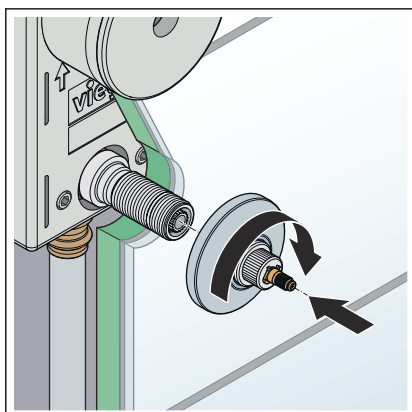


- Push the rosette onto the pre-assembled cap as far as it will go.
- Screw in the pre-assembled cap with the concealed extension until it is flush with the wall.

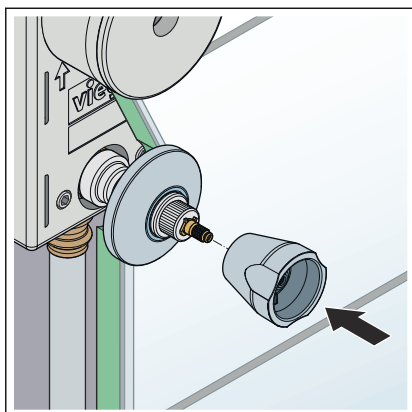

► Place the brass handle on the cap.

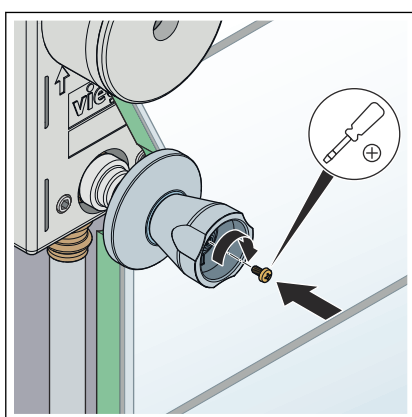

► Secure the brass handle with the fastening screw.

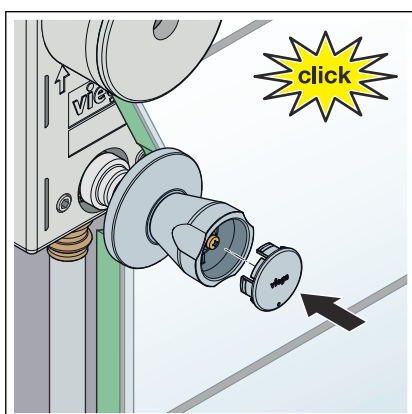

► Press on the decorative cap.



NOTICE!

Protect the valve body and internal upper section from being contaminated.

3.3 Maintenance

Deposits in pipework can make operation more difficult. Operate the brass handle regularly. Open and close completely at least once a year and return to the starting position.

3.4 Disposal

Separate the product and packaging materials (e. g. paper, metal, plastic or non-ferrous metals) and dispose of in accordance with valid national legal requirements.



Viega GmbH & Co. KG
service-technik@viega.de
viega.com

INT • 2026-08 • VPN240381

